

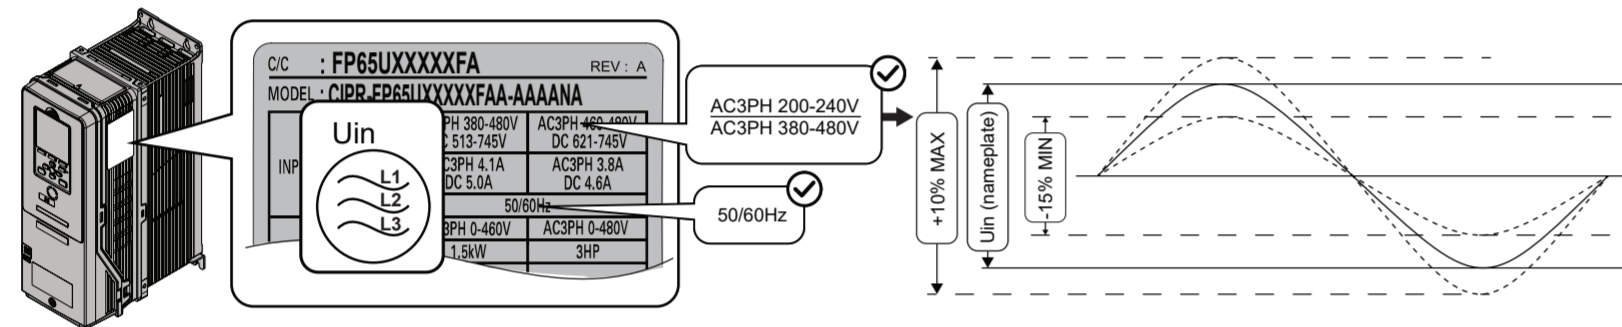


Read and follow the safety and installation procedures in the Installation & Primary Operation (TOEPC7106171F) manual packaged with the drive.

1 Confirm the Drive and Motor Specifications

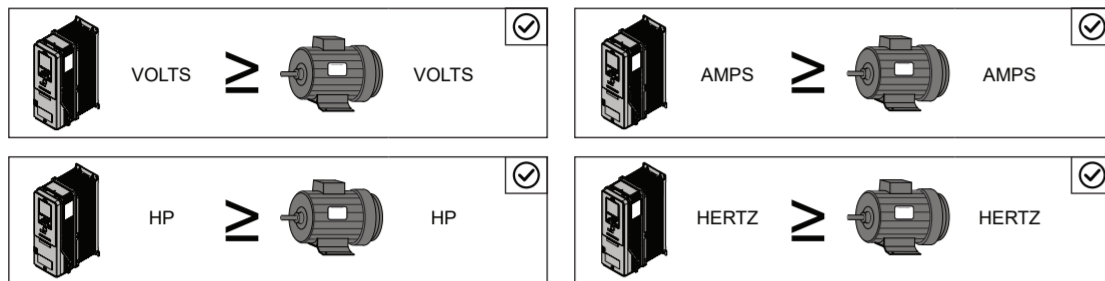


2 Confirm the Correct Drive Installation Environment

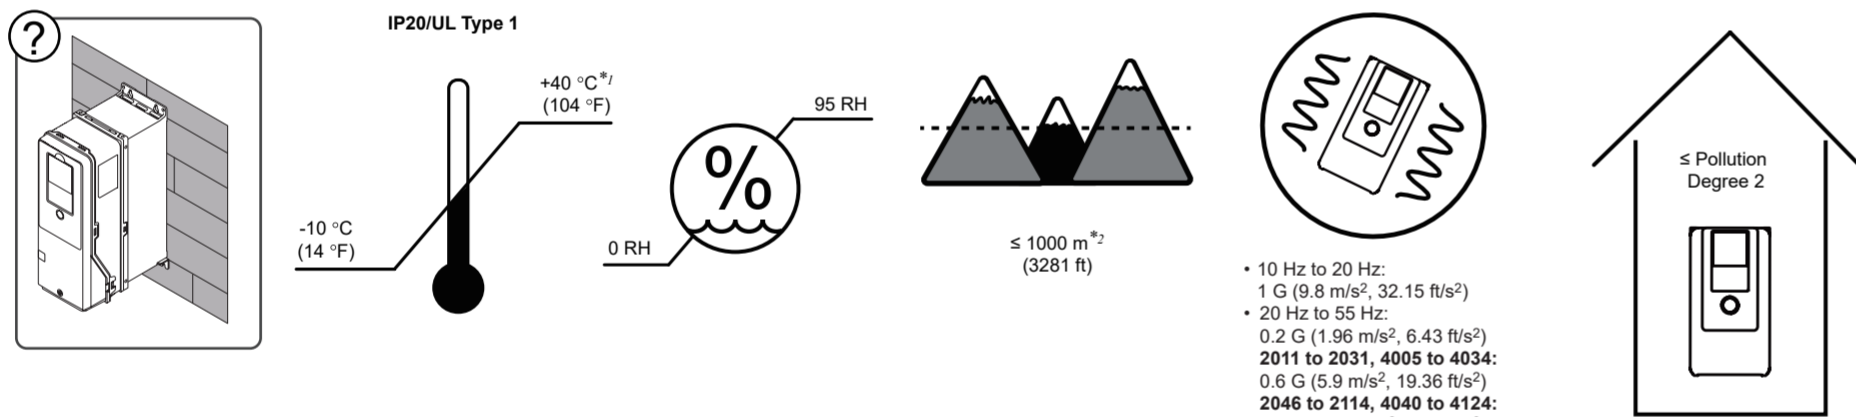


*1 You can use the drive at a maximum of 60 °C (140 °F) when you derate the output current.
 *2 Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 m to 4000 m (3281 ft to 13123 ft). Refer to the Technical Reference (SIEPC7106171F) for derating information.

3 Use the Enclosed Drilling Template to Mount the Drive Vertically

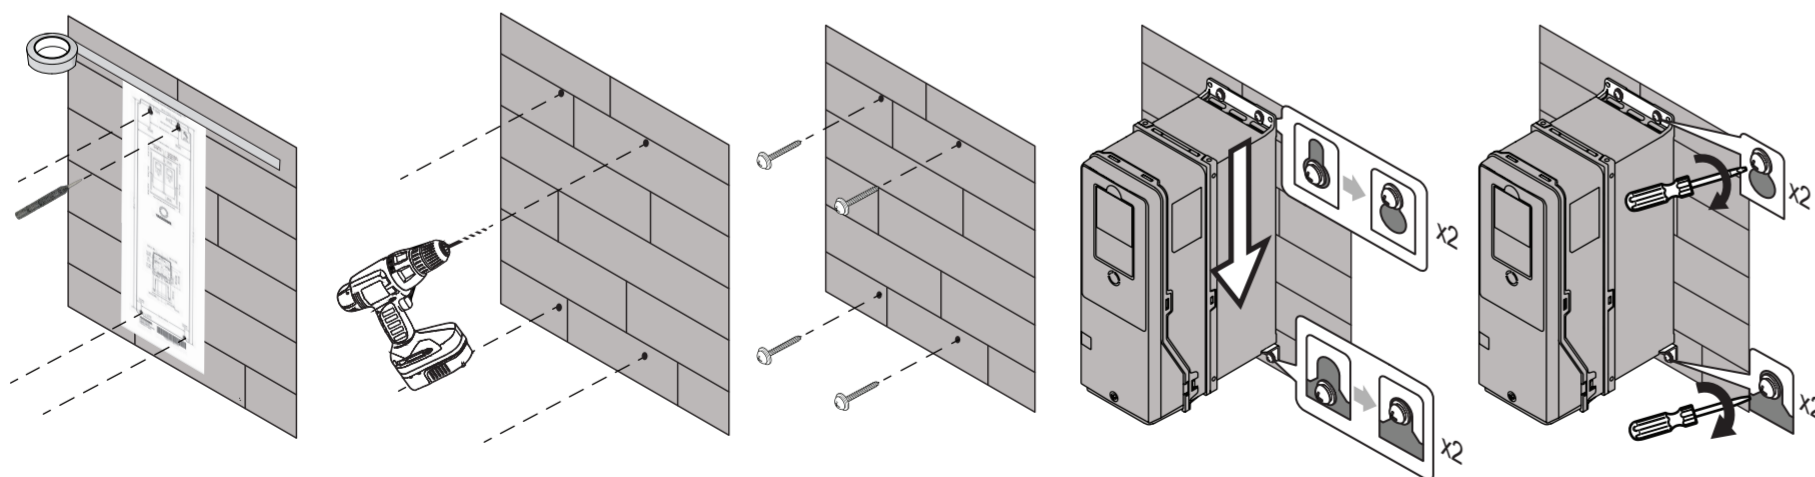

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

4 Select the Motor and Power Wires, Wire Strip Length, Crimp Terminals, and Branch Circuit Protection

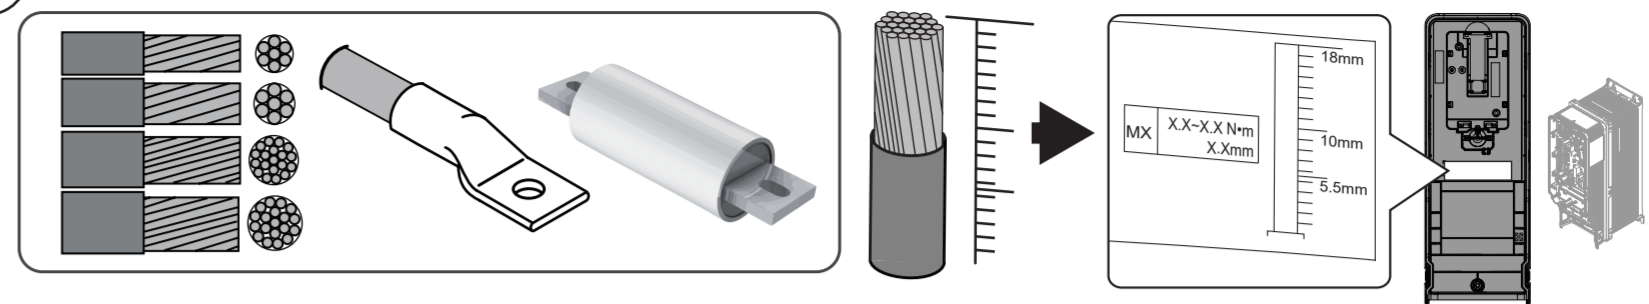

208 V Class Wires and Crimp Terminals

Drive Model [FP65UXXXX]	Terminal	Wire Range AWG/kcmil (mm ²) ¹⁾	Recommended Wire Gauge AWG/kcmil	Panduit Crimp Terminal Part Number ^{2),3)}	Drive Model [FP65UXXXX]	Terminal	Wire Range AWG/kcmil (mm ²) ¹⁾	Recommended Wire Gauge AWG/kcmil	Panduit Crimp Terminal Part Number ^{2),3)}	Drive Model [FP65UXXXX]	Terminal	Wire Range AWG/kcmil (mm ²) ¹⁾	Recommended Wire Gauge AWG/kcmil	Panduit Crimp Terminal Part Number ^{2),3)}
2011	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	14	N/A	2031	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	8	N/A	2075	R/L1, S/L2, T/L3	8 - 2/0 (10 - 70)	4	LCA4-56-L
	- , +1	14 - 8 (2.5 - 10)	14	N/A		- , +1	14 - 8 (2.5 - 10)	8	N/A		U/T1, V/T2, W/T3	8 - 2/0 (10 - 70)	3 or 2	LCA4-56-L/LCA2-56-Q
	⊕	14 - 8 (2.5 - 10)	12	LCA10-14-L		⊕	14 - 8 (2.5 - 10)	10	LCA10-14-L		- , +1	8 - 2/0 (10 - 70)	2	LCA2-56-Q
2017	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	12	N/A	2046	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 4 (2.5 - 25)	8	N/A	2088	R/L1, S/L2, T/L3	8 - 2/0 (10 - 70)	3 or 2	LCA4-56-L/LCA2-56-Q
	- , +1	14 - 8 (2.5 - 10)	10	N/A		- , +1	14 - 4 (2.5 - 25)	6	N/A		U/T1, V/T2, W/T3	8 - 2/0 (10 - 70)	2	LCA2-56-Q
	⊕	14 - 8 (2.5 - 10)	10	LCA10-14-L		⊕	14 - 4 (2.5 - 25)	8	LCA8-14-L		- , +1	8 - 2/0 (10 - 70)	1	LCA1-56-E
2024	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	10	N/A	2059	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 4 (2.5 - 25)	4	N/A	2114	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	8 - 2/0 (10 - 70)	1/0	LCA1/0-56-X
	- , +1	14 - 8 (2.5 - 10)	8	N/A		- , +1	14 - 4 (2.5 - 25)	4	N/A		- , +1	8 - 2/0 (10 - 70)	2/0	LCA2/0-56-X
	⊕	14 - 8 (2.5 - 10)	10	LCA10-14-L		⊕	14 - 4 (2.5 - 25)	6	LCA6-14-L		⊕	8 - 2/0 (10 - 70)	6	LCA6-56-L

480 V Class Wires and Crimp Terminals

Drive Model [FP65UXXXX]	Terminal	Wire Range AWG/kcmil (mm ²) ¹⁾	Recommended Wire Gauge AWG/kcmil	Panduit Crimp Terminal Part Number ^{2),3)}	Drive Model [FP65UXXXX]	Terminal	Wire Range AWG/kcmil (mm ²) ¹⁾	Recommended Wire Gauge AWG/kcmil	Panduit Crimp Terminal Part Number ^{2),3)}	Drive Model [FP65UXXXX]	Terminal	Wire Range AWG/kcmil (mm ²) ¹⁾	Recommended Wire Gauge AWG/kcmil	Panduit Crimp Terminal Part Number ^{2),3)}
4005 4008	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	14	N/A	4027	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	10	N/A	4065	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 4 (2.5 - 25)	4	N/A
	- , +1	14 - 8 (2.5 - 10)	14	N/A		- , +1	14 - 8 (2.5 - 10)	8	N/A		- , +1	14 - 4 (2.5 - 25)	4	N/A
	⊕	14 - 8 (2.5 - 10)	14	LCA10-14-L		⊕	14 - 8 (2.5 - 10)	8	N/A		⊕	14 - 4 (2.5 - 25)	6	LCA6-14-L
4011	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	14	N/A	4034	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	8	N/A	4077	R/L1, S/L2, T/L3	8 - 2/0 (10 - 70)	4	LCA4-56-L
	- , +1	14 - 8 (2.5 - 10)	14	N/A		- , +1	14 - 8 (2.5 - 10)	8	N/A		U/T1, V/T2, W/T3	8 - 2/0 (10 - 70)	3 or 2	LCA4-56-L/LCA2-56-Q
	⊕	14 - 8 (2.5 - 10)	12	LCA10-14-L		⊕	14 - 8 (2.5 - 10)	10	LCA10-14-L		- , +1	8 - 2/0 (10 - 70)	2	LCA2-56-Q
4014	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	12	N/A	4040	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 4 (2.5 - 25)	8	N/A	4096	R/L1, S/L2, T/L3	8 - 2/0 (10 - 70)	2	LCA2-56-Q
	- , +1	14 - 8 (2.5 - 10)	12	N/A		- , +1	14 - 4 (2.5 - 25)	6	N/A		U/T1, V/T2, W/T3	8 - 2/0 (10 - 70)	1	LCA1-56-E
	⊕	14 - 8 (2.5 - 10)	10	LCA10-14-L		⊕	14 - 4 (2.5 - 25)	8	LCA8-14-L		- , +1	8 - 2/0 (10 - 70)	1	LCA1-56-E
4021	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 8 (2.5 - 10)	10	N/A	4052	R/L1, S/L2, T/L3 U/T1, V/T2, W/T3	14 - 4 (2.5 - 25)	6	N/A	4124	R/L1, S/L2, T/L3	8 - 2/0 (10 - 70)	1/0	LCA1/0-56-X
	- , +1	14 - 8 (2.5 - 10)	10	N/A		- , +1	14 - 4 (2.5 - 25)	4	N/A		U/T1, V/T2, W/T3	8 - 2/0 (10 - 70)	2/0	LCA2/0-56-X
	⊕	14 - 8 (2.5 - 10)	10	LCA10-14-L		⊕	14 - 4 (2.5 - 25)	8	LCA8-14-L		- , +1	8 - 2/0 (10 - 70)	4	LCA4-56-L

*1 The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.
 *2 For use with PANDUIT Corp. heat-shrinkable tubing HSTT series or an equivalent UL-recognized heat shrinkable tubing rated 600 V minimum.
 *3 Refer to the Installation & Primary Operation (TOEPC7106171F) for possible PANDUIT Type P and Type S crimp terminal alternatives.

Branch Circuit Protection

Yaskawa recommends installing one of the following types of branch circuit protection to maintain compliance with UL. Semiconductor protective type fuses are preferred. Alternate branch circuit protection devices are also listed. Maximum fuse rating is 175% of drive full load output amps (FLA). This covers any Class CC, J, or T class fuse.

208 V Class Factory-Recommended Fuses

	2011	2017	2024	2031	2046	2059	2075	2088	2114	
Bussmann Semiconductor¹⁾	FWH-40B	FWH-45B	FWH-80B	FWH-125B	FWH-125B	FWH-175B	FWH-200B	FWH-225A	FWH-225A	
Alternate Fusing (Class CC, J, or T)²⁾	Max. Rating (A)	17.5	25	40	50	80	100	125	150	175
	Max.SCCR (kA)	100	100	100	100	100	100	100	100	100


480 V Class Factory-Recommended Fuses

	4005	4008	4011	4014	4021	4027	4034	4040	4052	4065	4077	4096	4124	
Bussmann Semiconductor¹⁾	FWH-25A14F	FWH-30A14F	FWH-40B	FWH-45B	FWH-60B	FWH-80B	FWH-100B	FWH-125B	FWH-150B	FWH-200B	FWH-225A	FWH-225A	FWH-225A	
Alternate Fusing (Class CC, J, or T)²⁾	Max. Rating (A)	8	12	17.5	20	35	45	50	70	90	110	125	150	200
	Max.SCCR (kA)	100	100	100	100	100	100	100	100	100	100	100	100	


*1 Recommended EATON/Bussmann Semiconductor fuse model.
 *2 Class CC fuses are time-delay only. Class J fuses are fast-acting (non-time delay only). Class T fuses are fast-acting (non-time delay only). Class J fuses can be time-delay or non-time delay.




5 Remove the Keypad, Front Cover, Conduit Bracket, and Knock-Outs. Reinstall the Conduit Bracket for non-Cabinet Installations

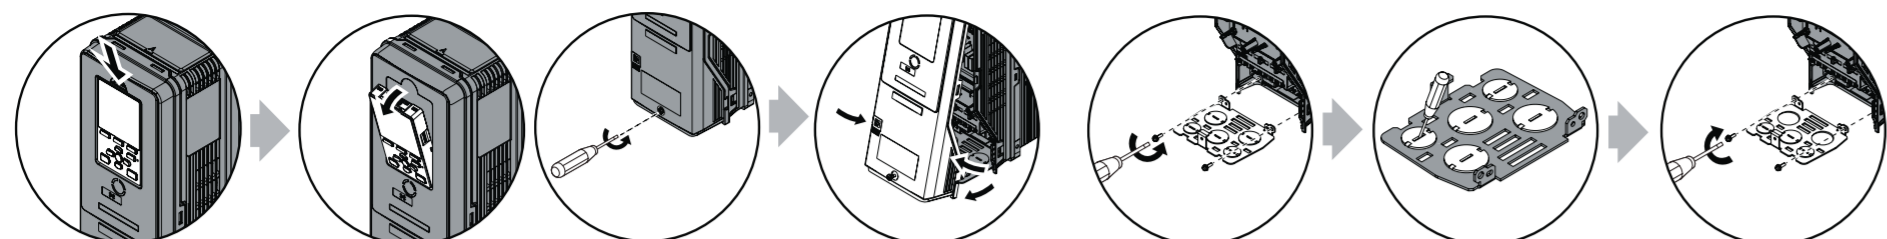


6 Install the Motor Wiring and Power Wiring

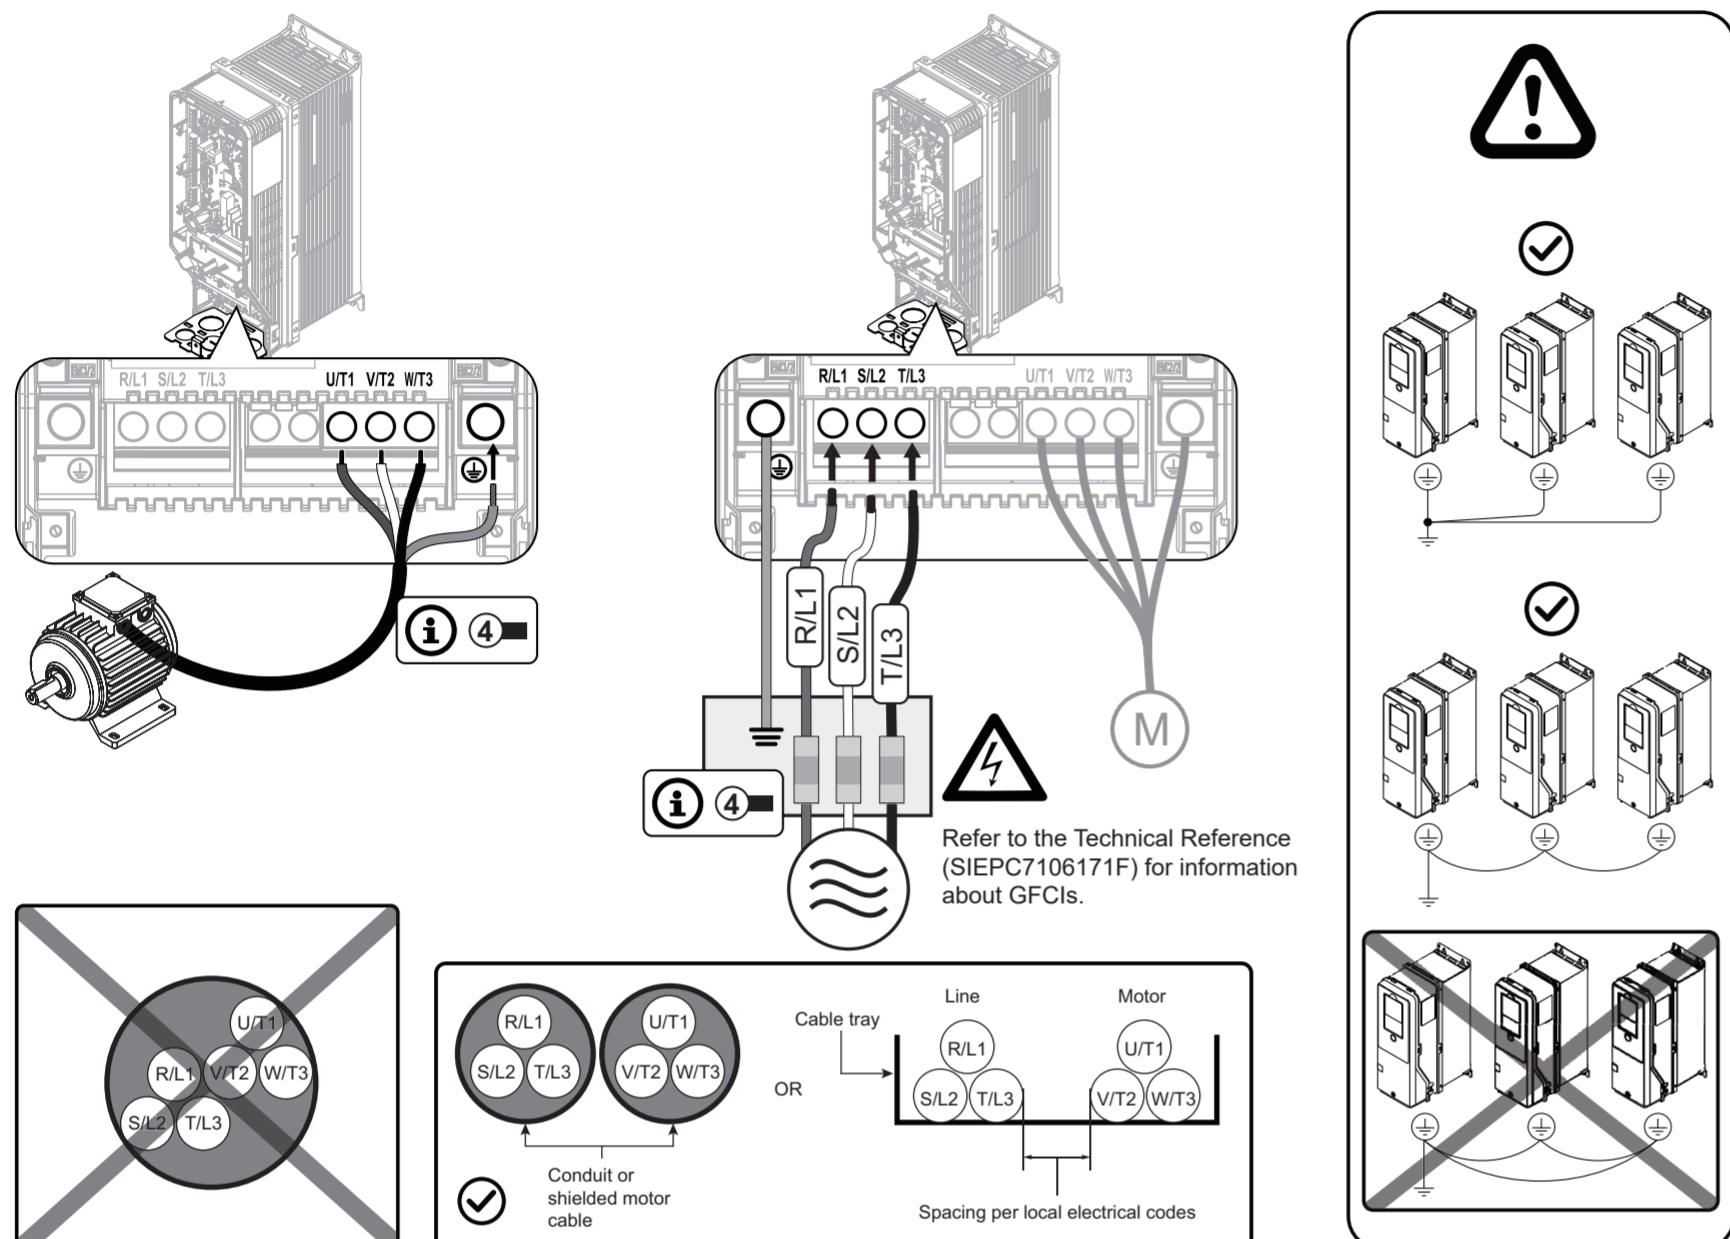

7 Install the Front Cover and Keypad

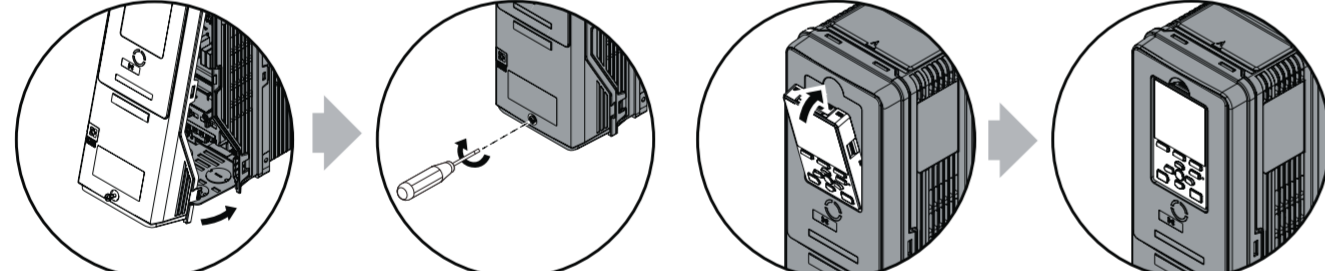


8 Energize the Drive and Confirm It Is Ready

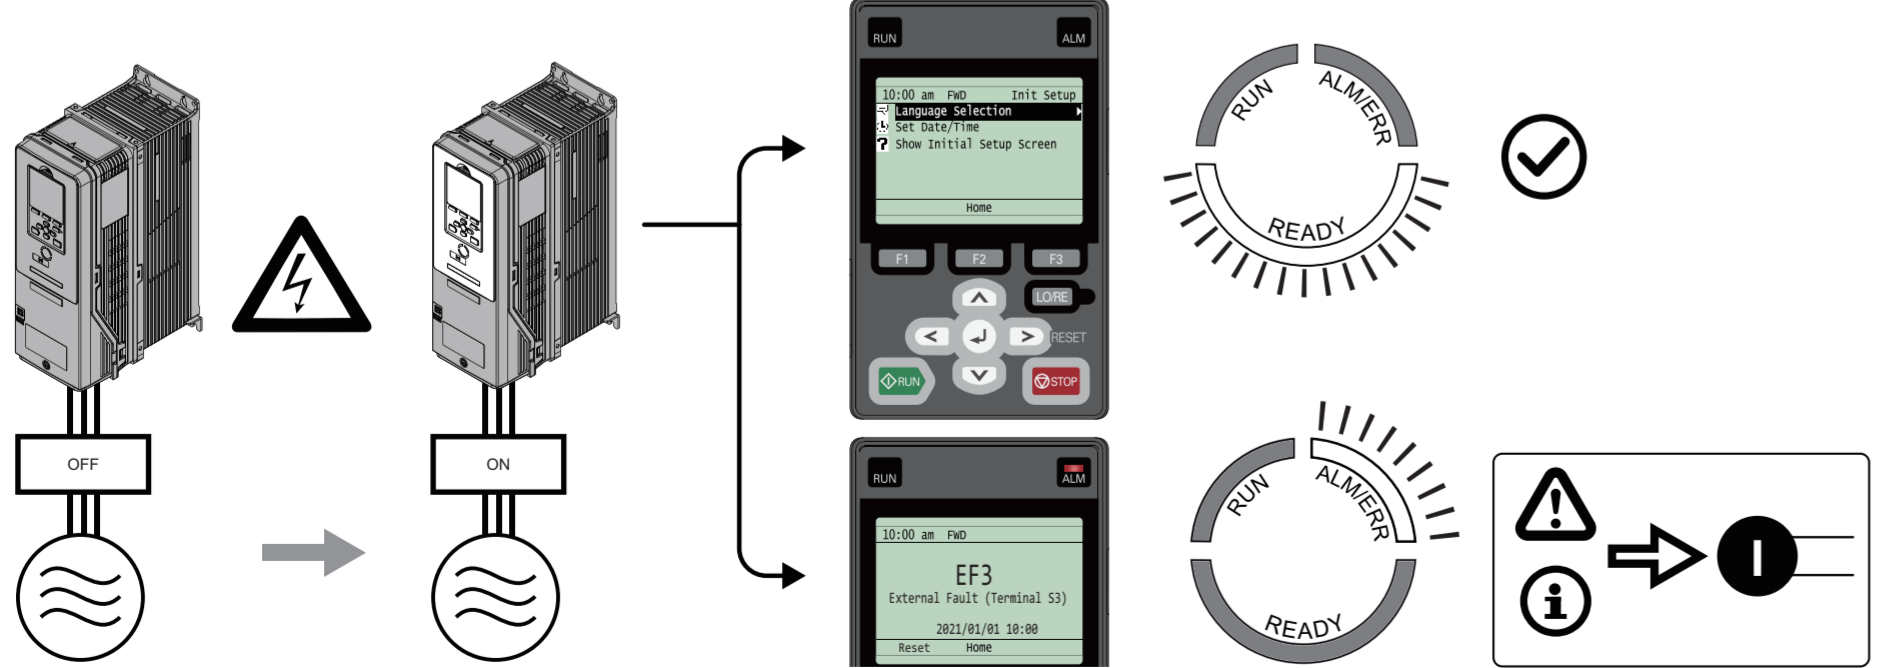


9 Set the Motor Rated Current (FLA) from the Motor Nameplate in E2-01

3 PHASE INVERTER DUTY AC INDUCTION MOTOR NAMEPLATE EXAMPLE

MODEL XX	123AAAA123XX-X0	X FRAME 123AX
POLES X	ENC XXX CODEX	DES A TYPE ABC INS X0
VOLTS XXX	FL RPM XXXX	FL AMPS XX/XX A
SF 1.0	DUTY CONT	MAX AMB °C XX
SERIAL		N.L. AMPS XX.X/XX.X
MAX RPM 4200	S.E. BRG. 309	O.S.E. BRG. XXX
ROTOR WK ² X.X		
HZ	kW	RPM
1	-	0
60	XX	XXXX
120	XX	XXXX
TORQUE (LB FT)		VOLTS (HIGH CONN)
AMPS (HIGH CONN)		
OHMS PH. R1: .XXX R2: .XXX		x1: X.XX x2: X.XX
P/N XXXXXXX		XM: XX.X

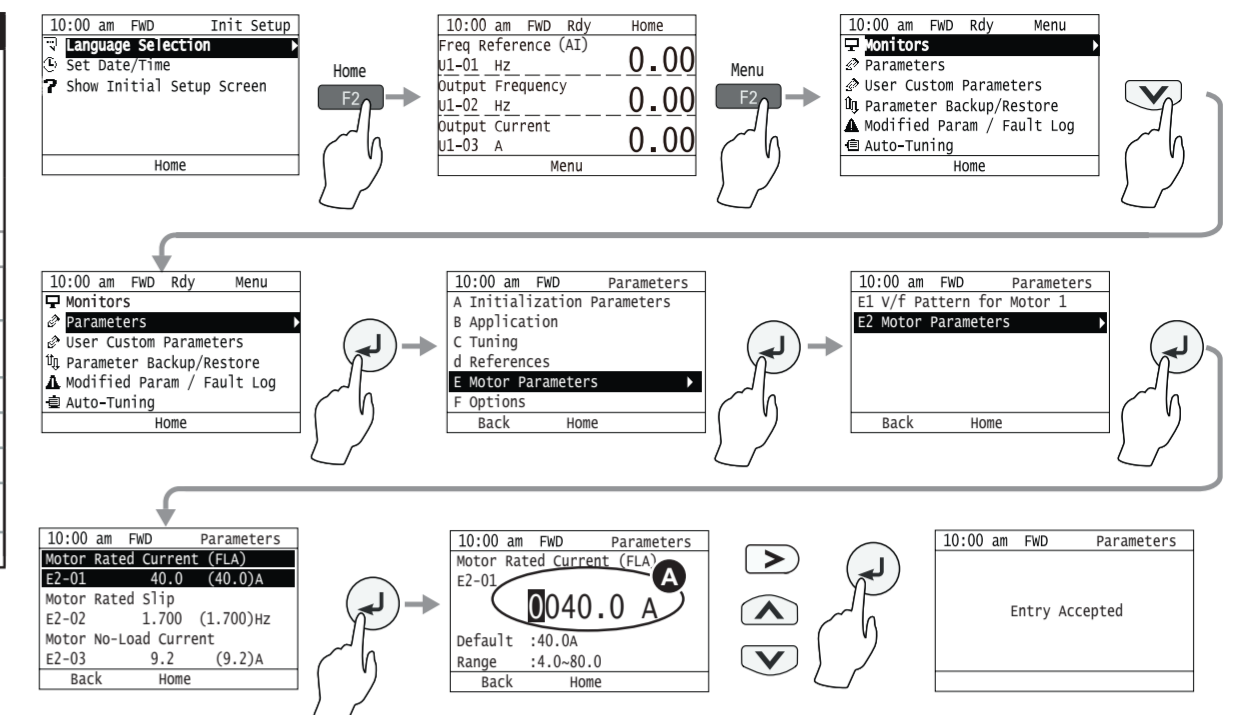


10 Set the Drive for LOCAL Control and Check the Motor Rotation Direction

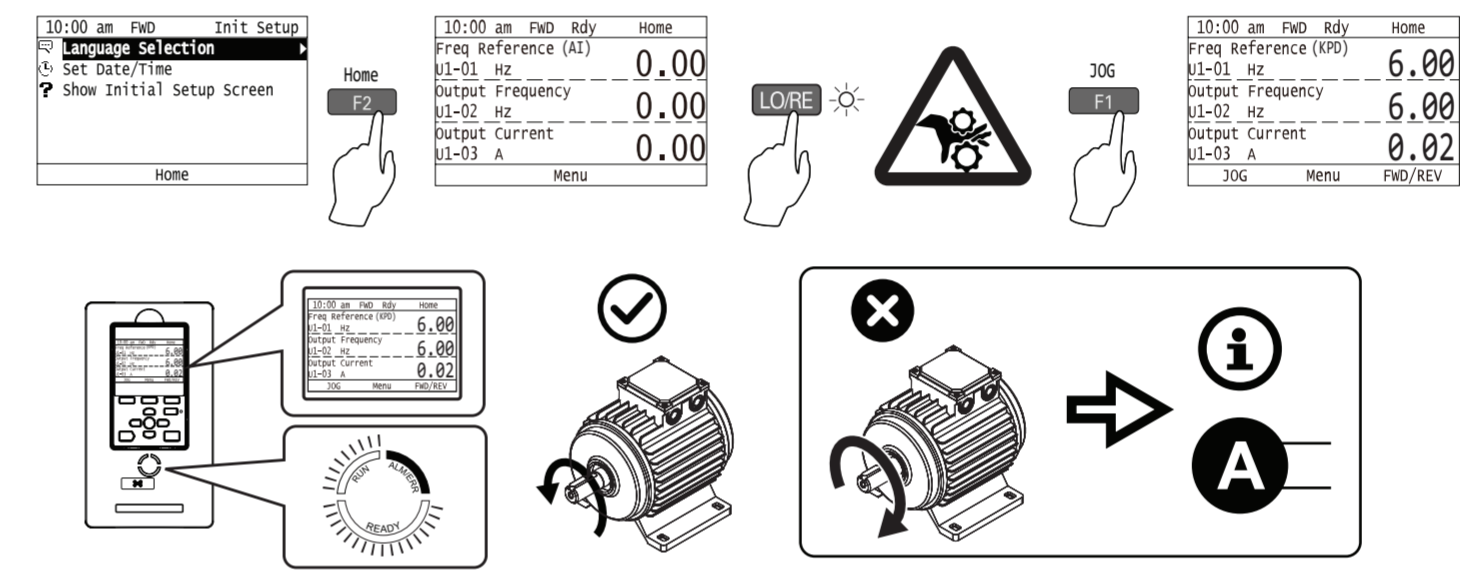


Additional Information for Installation and Primary Operation


A If the Motor Does Not Rotate in the Correct Direction

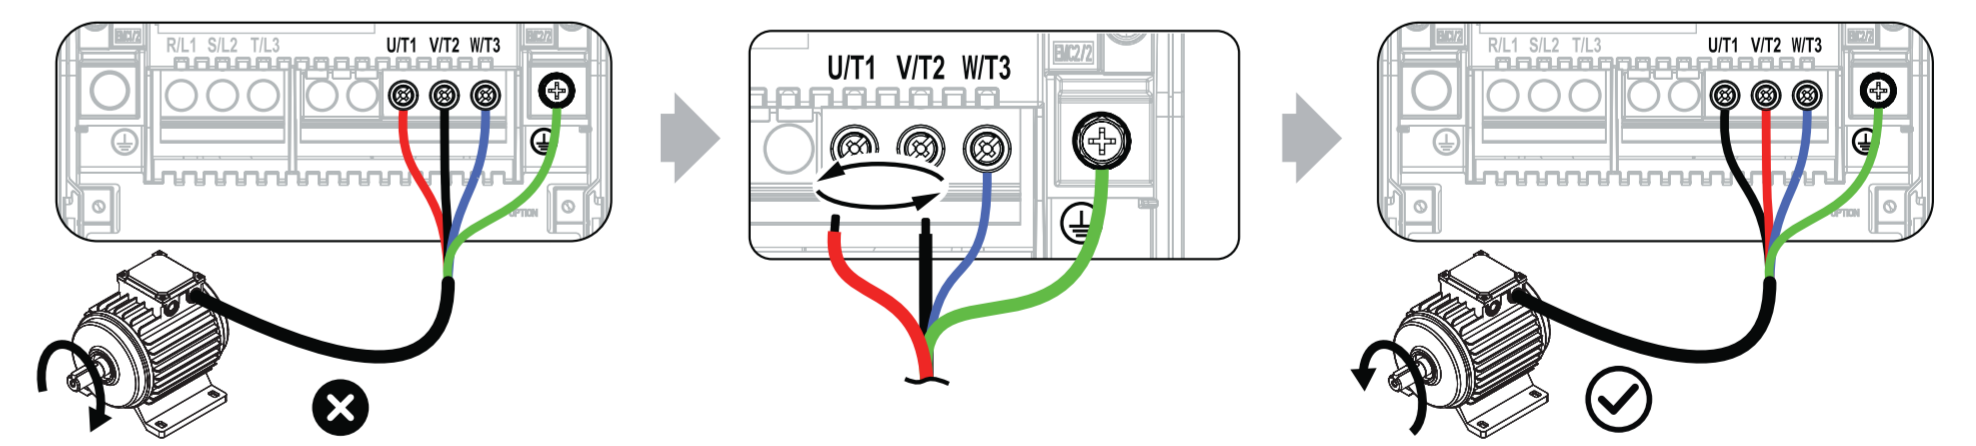


B Control Circuit Configuration

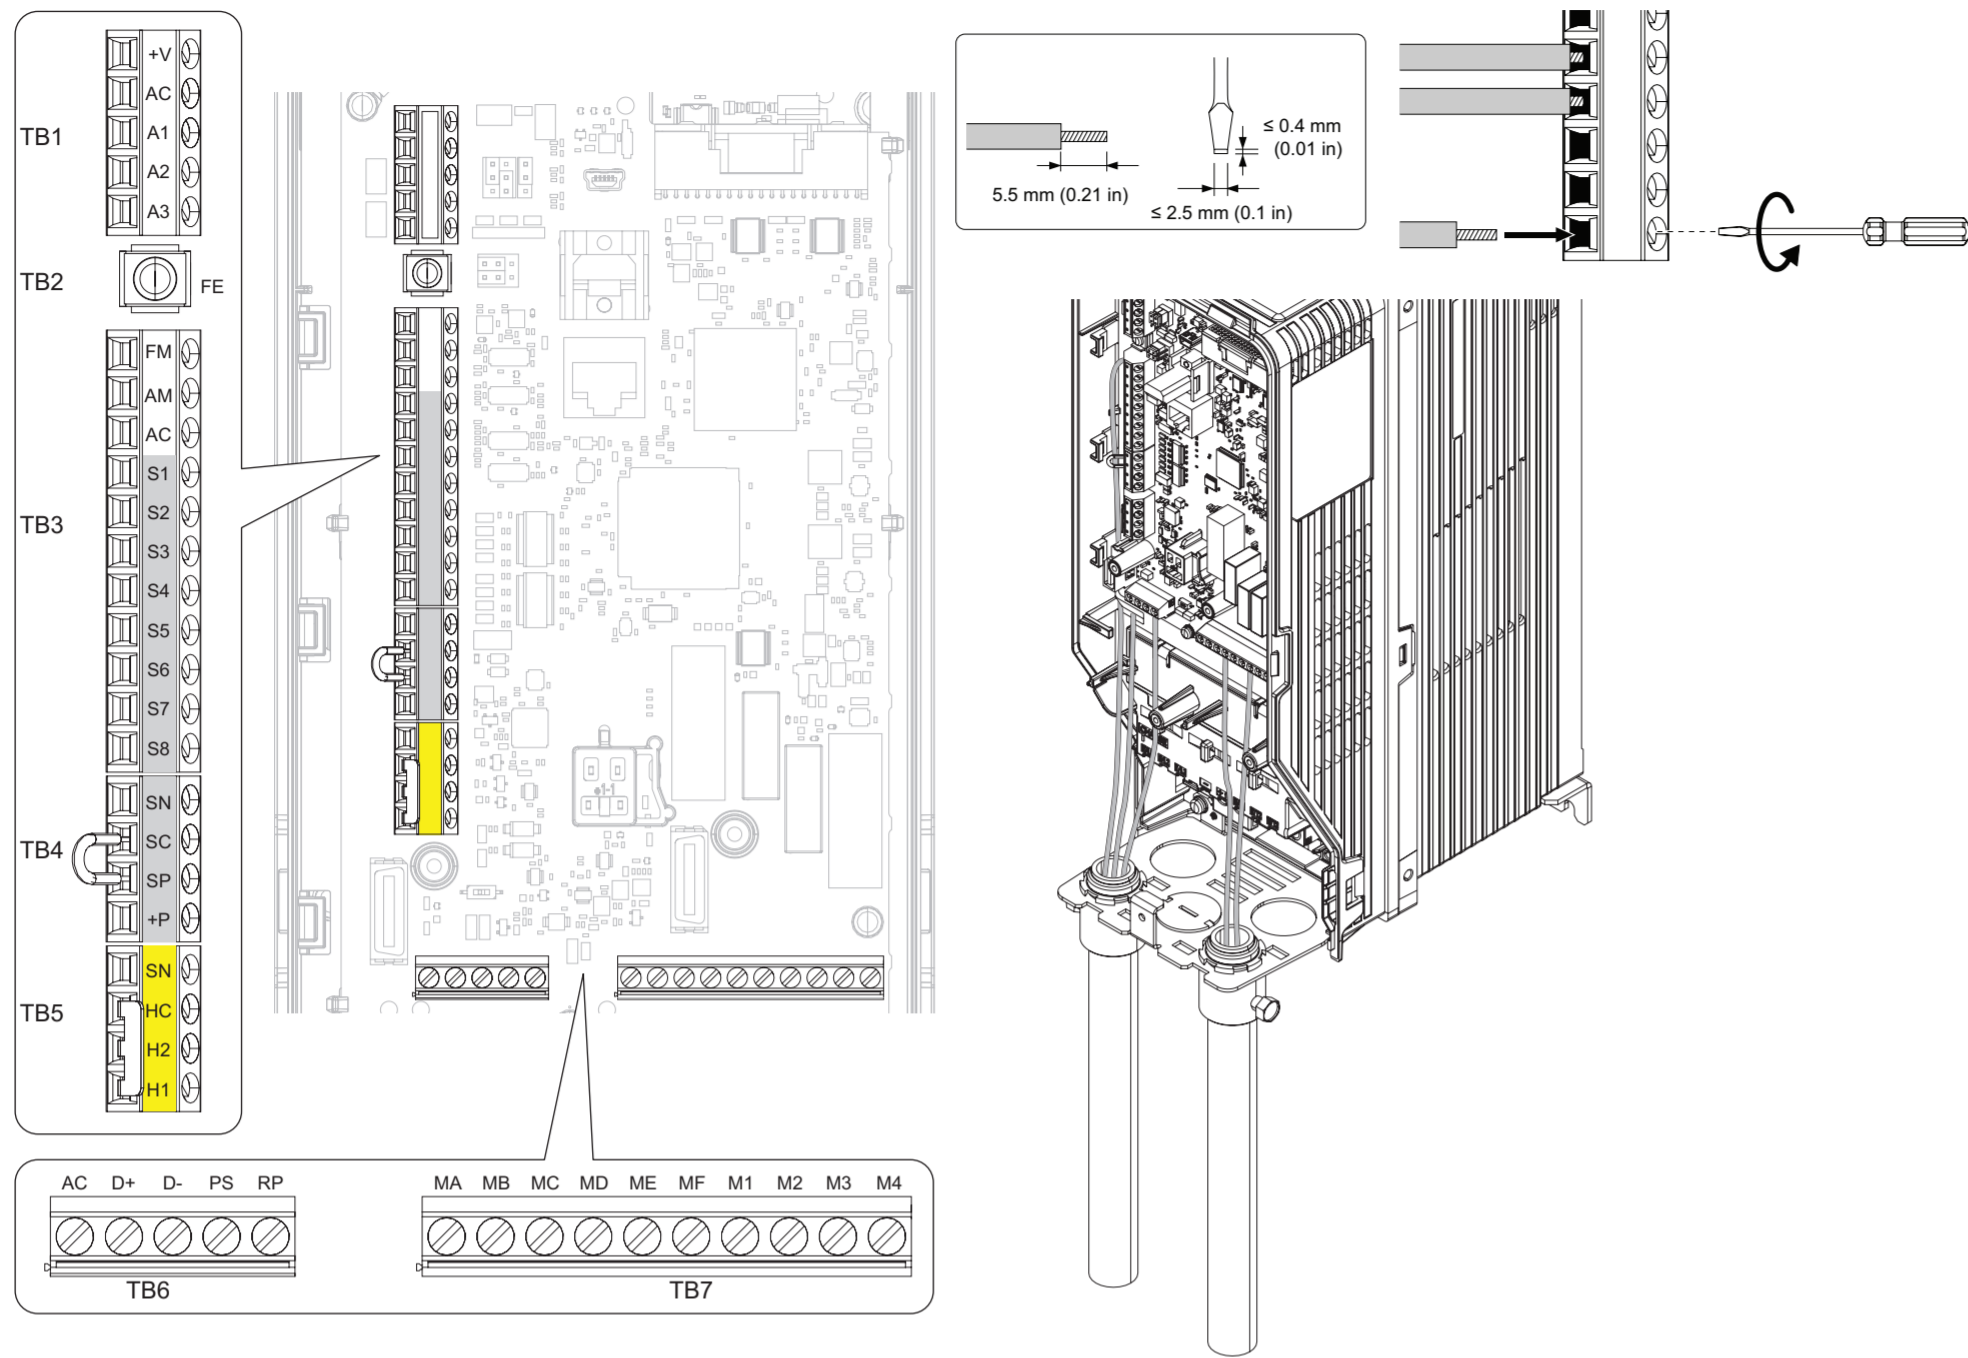

C Switches and Jumpers on the Control Board

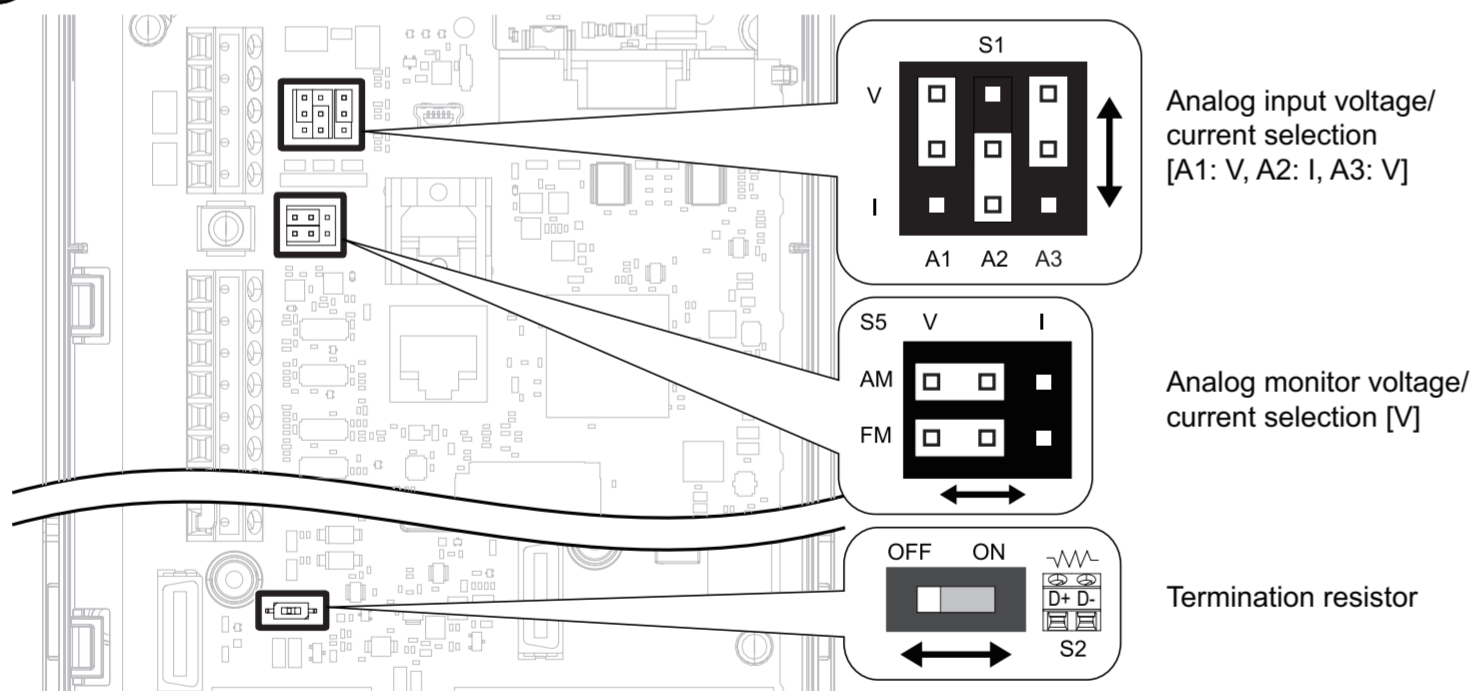


D Connection Diagram and Terminal Functions

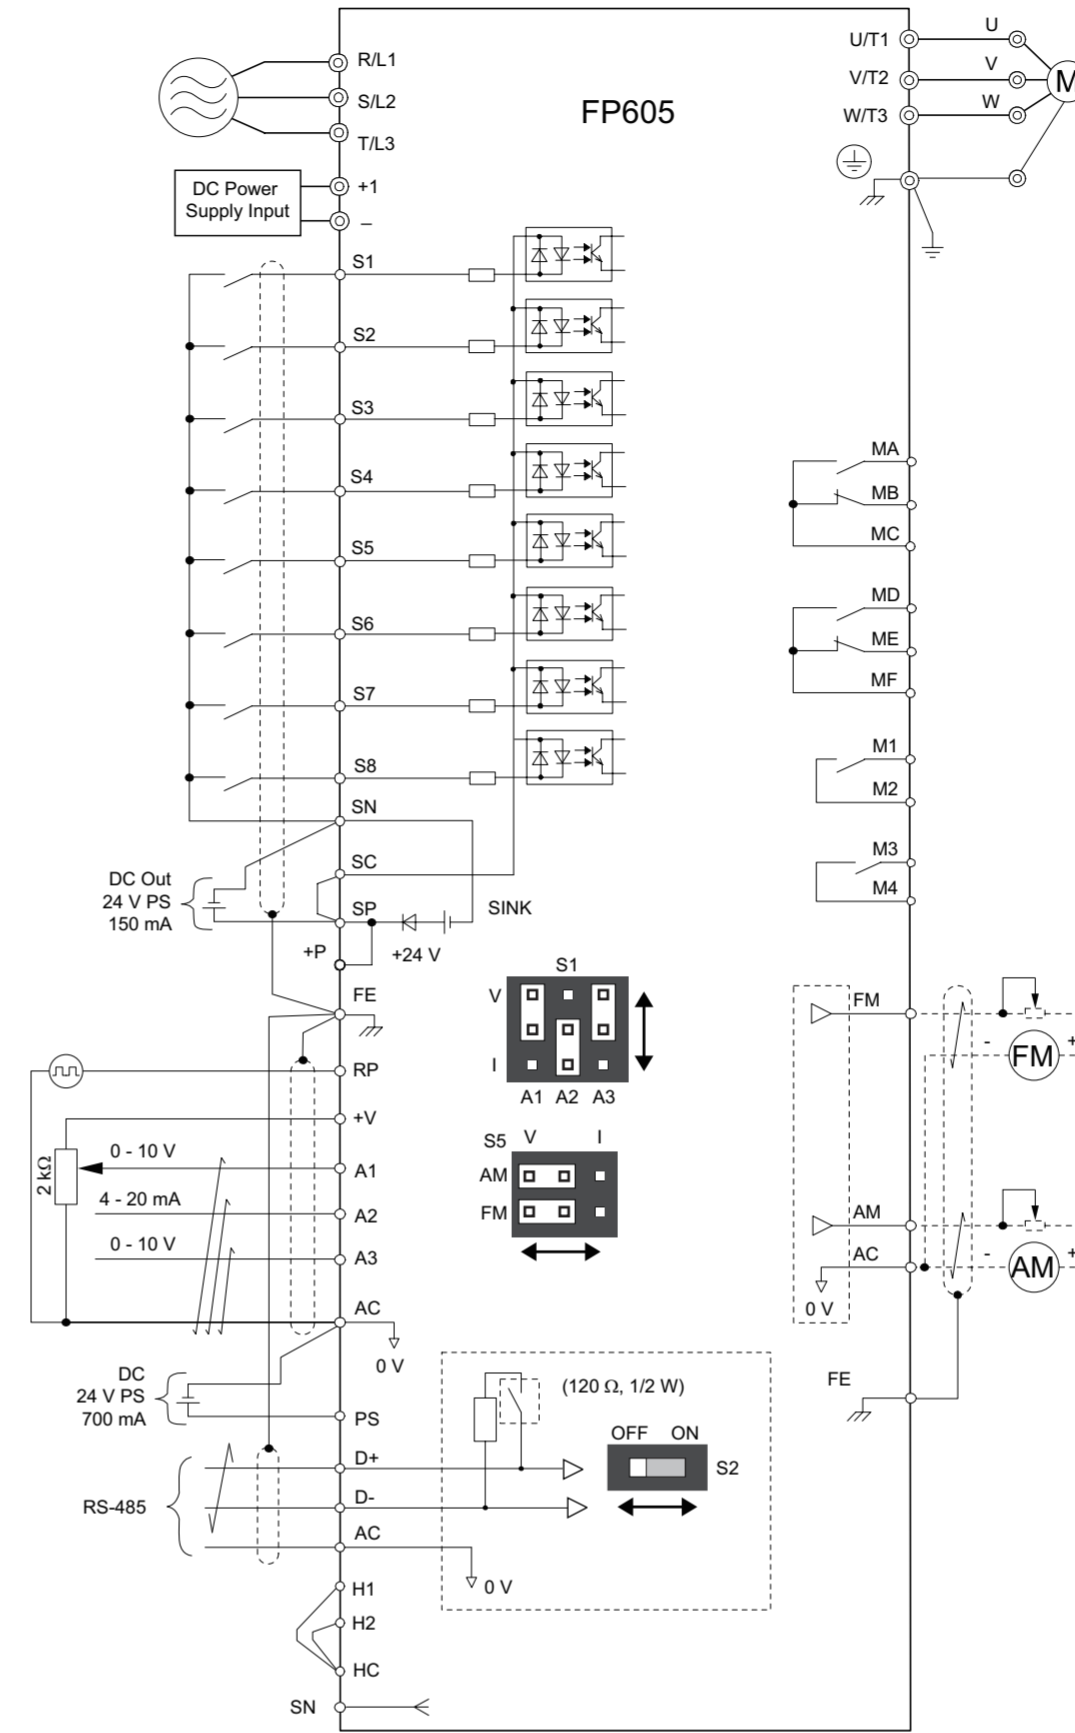


Terminal	Type	Signal Level	Default
S1	MFDI 1	Photocoupler 24 V, 6 mA Internal impedance: 4.7 kΩ	Forward RUN (2-Wire)
S2	MFDI 2		Reverse RUN (2-Wire)
S3	MFDI 3		External Fault (NO-Always-Coast)
S4	MFDI 4		Fault Reset
S5	MFDI 5		Multi-Step Speed Reference 1
S6	MFDI 6		Multi-Step Speed Reference 2
S7	MFDI 7		Jog Reference Selection
S8	MFDI 8		Baseblock Command (N.O.)
SN	MFDI power 0 V		-
SC	MFDI common	24 V, 150 mA maximum	-
SP	MFDI power +24 VDC		-
H1	Safe disable input 1	Photocoupler 24 V, 6 mA Internal impedance: 4.7 kΩ	-
H2	Safe disable input 2		-
HC	Safe disable common		-
RP	Multi-function pulse train input	<ul style="list-style-type: none"> Response frequency: 0 Hz ~ 32 Hz H level duty: 30% ~ 70% H level voltage: 3.5 V ~ 13.2 V L level voltage: 0.0 V ~ 0.8 V Input impedance: 3 kΩ 	-
+V	Frequency setting power supply	10.5 V (20 mA maximum)	-
A1	MFAI 1	0 V ~ 10 V/100% (input impedance 20 kΩ)	Master frequency reference
A2	MFAI 2	4 mA ~ 20 mA/100% (input impedance 250 Ω)	Combined w/A1
A3	MFAI 3	0 mA ~ 20 mA/100% (input impedance 250 Ω)	Auxiliary frequency reference 1
AC	Common	0 V	-
FE	Connect shielded cable	-	-
MA	Fault relay out	30 VDC, 10 mA ~ 2 A 250 VAC, 10 mA ~ 2 A Minimum load: 5 V, 10 mA	Fault
MB	Fault relay out		Fault
MC	Common		-
MD	MFDO	30 VDC, 10 mA ~ 2 A 250 VAC, 10 mA ~ 2 A Minimum load: 5 V, 10 mA	Speed agree 1
ME	MFDO		
MF	Common		
M1	MFDO		During run
M2	MFDO		
M3	MFDO		Zero speed
M4	MFDO		
FM	MFAO 1	0 V ~ +10 V/0% ~ 100% 4 mA ~ 20 mA	Output frequency
AM	MFAO 2		Output current
AC	Common	0 V	-
+P	External power supply	24 V (150 mA maximum)	-
PS	External 24 V PS input	21.6 VDC ~ 26.4 VDC, 700 mA	-
AC	External 24 V PS ground	0V	-
D+	Communication +	MEMOBUS/Modbus 115.2 kbps maximum	-
D-	Communication -		-
AC	Common	0 V	-

E Set Frequency Reference Source

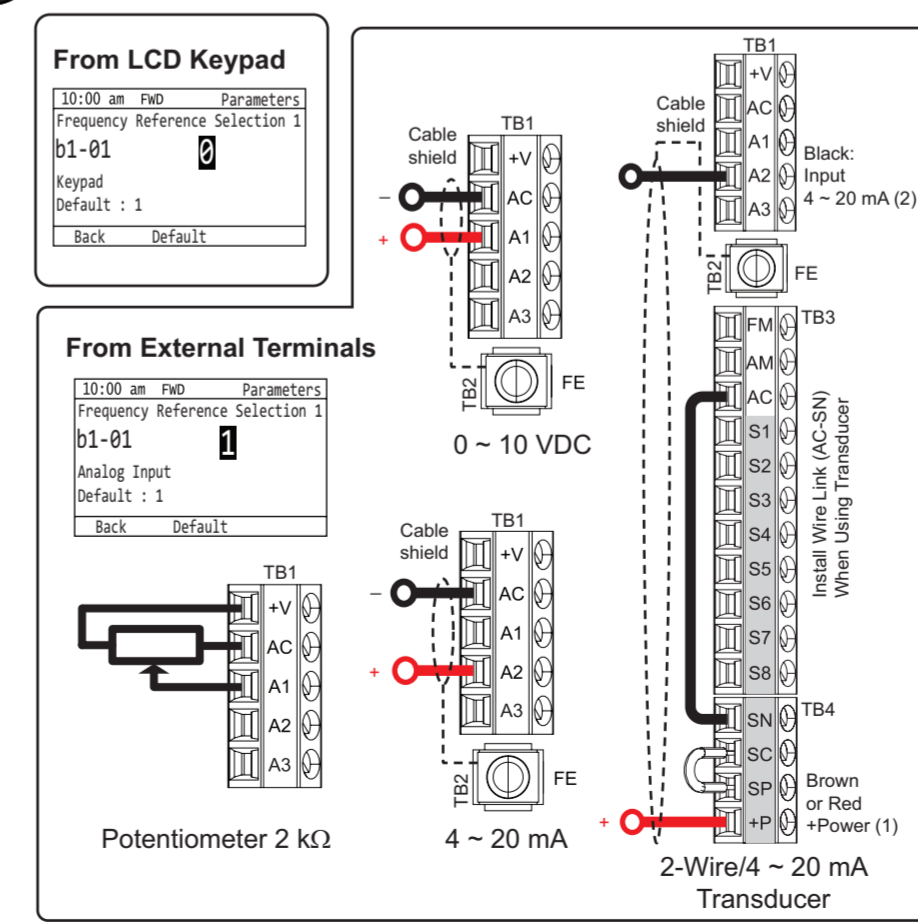

F Set Start/Stop Control Method from External Terminals

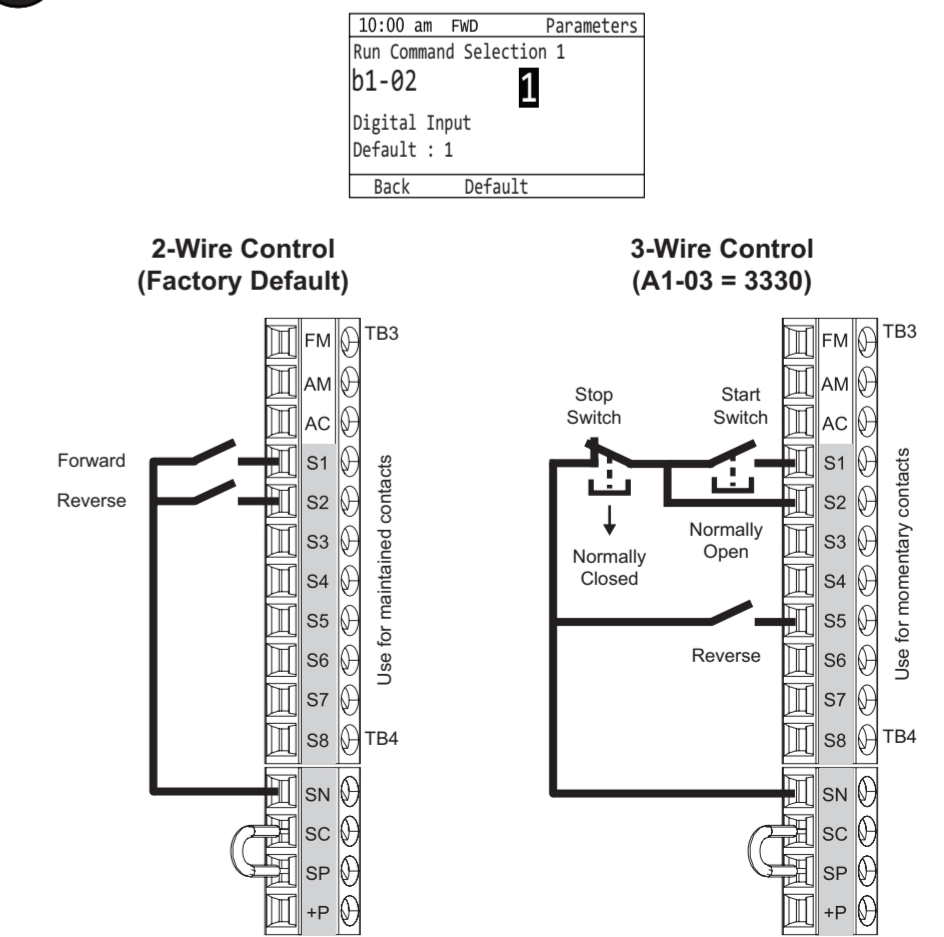

G If You Push the RUN Button but the Motor Does Not Spin

10:00 am FWD Rdy Home
 Freq Reference (KPD) 0.00
 U1-01 Hz
 Output Frequency 0.00
 U1-02 Hz
 Output Current 0.00
 U1-03 A
 JOG Menu FWD/REV

10:00 am FWD Init Setup
 Language Selection
 Set Date/Time
 Show Initial Setup Screen
 Home

10:00 am FWD Rdy Home
 Freq Reference (AI) 0.00
 U1-01 Hz
 Output Frequency 0.00
 U1-02 Hz
 Output Current 0.00
 U1-03 A
 Menu

10:00 am FWD Parameters
 Reference 1
 d1-01 000.00 Hz
 Default : 0.00 Hz
 Range : 0.00-60.00
 Back Default Min/Max

10:00 am FWD Parameters
 Reference 1
 d1-01 10.00 Hz
 Default : 0.00 Hz
 Range : 0.00-60.00
 Back Default Min/Max

10:00 am FWD Parameters
 Entry Accepted

10:00 am FWD Rdy Home
 Freq Reference (KPD) 10.00
 U1-01 Hz
 Output Frequency 0.00
 U1-02 Hz
 Output Current 0.00
 U1-03 A
 JOG Menu FWD/REV

10 Hz

H Parameter Groups

A: Initialization	d: Reference Settings	H: Terminal Functions	n: Special Adjustment	Y: Application Features
A1 Initialization	d1 Frequency Reference	H1 Digital Inputs	n1 Hunting Prevention	Y1 Application Basics
A2 User Parameters	d2 Reference Limits	H2 Digital Outputs	n3 High Slip/Overexcite Braking	Y2 PID Sleep and Protection
b: Application	d3 Jump Frequency	H3 Analog Inputs	n7 EZ Drive	Y3 Contactor Multiplex
b1 Operation Mode Selection	d4 Freq. Ref. Up/Down & Hold	H4 Analog Outputs	n8 PM Motor Control Tuning	Y4 Application Advanced
b2 DC Injection Braking and Short Circuit Braking	d6 Field Weakening	H5 Modbus Communication	o: Keypad-Related Settings	Y8 De-Scale/De-Rag
b3 Speed Search	d7 Offset Frequency	H6 Pulse Train Input	o1 Keypad Display	YA Preset Setpoint
b4 Timer Function	E: Motor	H7 Virtual Inputs/Outputs	o2 Keypad Operation	YC Feedback Features
b5 PID Control	E1 V/f Pattern for Motor 1	L: Protection Functions	o3 Copy Keypad Function	YF PI Auxiliary Control
b6 Dwell Function	E2 Motor Parameters	L1 Motor Protection	o4 Maintenance Monitors	
b8 Energy Saving	E3 V/f Pattern for Motor 2	L2 Power Loss Ride Through	o5 Log Function	
C: Tuning	E4 Motor 2 Parameters	L3 Stall Prevention	S: Special Applications	
C1 Accel & Decel Time	E5 PM Motor Settings	L4 Speed Detection	S1 Dynamic Noise Control	
C2 S-Curve Characteristics	E9 Motor Setting	L5 Fault Restart	S3 PI2 Control	
C3 Slip Compensation	F: Options	L6 Torque Detection	S6 Protection	
C4 Torque Compensation	F2 Analog Input Option	L7 Torque Limit	T: Auto-Tuning	
C5 Auto Speed Regulator (ASR)	F3 Digital Input Option	L8 Drive Protection	T1 InductionMotor Auto-Tuning	
C6 Carrier Frequency	F4 Analog Output Option	L9 Drive Protection 2	T2 PM Motor Auto-Tuning	
	F5 Digital Output Option		T4 EZ Tuning	
	F6 Communication Options			
	F7 Ethernet Options			

Frequently Used Parameters

Parameter Number Name	Default Description	Parameter Number Name	Default Description	Parameter Number Name	Default Description
A1-06 Application Preset	0 No preset	b5-03 Integral Time (I)	1.0 s	d2-02 Frequency Reference Lower Limit	0.0%
b1-01 Frequency Reference Selection 1	1 Analog Input	b5-05 Derivative Time (D)	0.00 s	E1-01 Input AC Supply Voltage	-
b1-02 Run Command Selection 1	1 Digital Input	C1-01 Acceleration Time 1	10.0 s	E2-01 Motor Rated Current (FLA)	-
b1-03 Stopping Method Selection	1 Coast to Stop	C1-02 Deceleration Time 1	10.0 s	H3-09 Terminal A2 Signal Level Select	2 4 to 20 mA
b5-01 PID Mode Setting	0 Disabled	d2-01 Frequency Reference Upper Limit	100.0%	H3-10 Terminal A2 Function Selection	0 Frequency Reference
b5-02 Proportional Gain (P)	1.00				

I Troubleshooting Resources for Drive Faults and Alarms



Resource	Choose This When:	URL	QR Code
Installation & Primary Operation	You have access to the paper copy of the manual that was packaged with the drive. This manual lists all drive faults and alarms, and offers a selection of causes and solutions.	https://www.yaskawa.com/toepc7106171f	 PDF download
DriveWizard Mobile App	You want to use your smartphone or tablet and use the embedded help to look up the full complement of causes and solutions to all drive faults and alarms.	https://www.yaskawa.com/dwm	 App download
Maintenance & Troubleshooting Manual	You want to download a PDF of the manual to your smartphone or tablet. This manual lists the full complement of causes and solutions to all drive faults and alarms and also includes detailed information about drive maintenance, wiring, and programming.	https://www.yaskawa.com/toeypaif6001	 PDF download

J Additional Resources

Download on the **App Store** | GET IT ON **Google Play**

Mobile App

 DriveWizard® Mobile Commissioning Smartphone App
<https://www.yaskawa.com/dwm>

Product Manuals

 •PDFs
 •Online HTML5-Searchable
 •Manuals App
<https://www.yaskawa.com/tp605manuals>

K Customer Feedback

Comments or questions about this document? Fill out our online form:

or
 Email us: technical_documentation@yaskawa.com
 Call us: 1-800-YASKAWA (927-5292)
www.yaskawa.com/DRV-F-0006

Please consider following us on social media:

YouTube www.youtube.com/yaskawayea
in www.linkedin.com/company/18822
Twitter www.twitter.com/yaskawa

Headquarters Address:
YASKAWA AMERICA, INC.
 2121 Norman Drive South
 Waukegan, IL 60085
 USA
 © 2021 YASKAWA Electric Corporation
 MANUAL NO. TOEP C710617 1AA <0>-0
 Published in Japan February 2021