

Solid State AC Motor Control

# VMX-synergy \*\*

# PROFIBUS DP MODULE QUICK START GUIDE





### Caution


This option module is specifically designed to be used with the VMX-synergy™ range of soft-start products and is intended for professional incorporation into complete equipment or systems. If installed incorrectly it may present a safety hazard. Before commencing installation and commissioning, the user should ensure they are fully familiar with the VMX-synergy™ unit, and in particular have read the important safety information and warnings contained in the VMX-synergy™ User Guide.

# Overview

The Profibus DP Interface is intended to be installed in the VMX-synergy™ option slot, and allows the VMX-synergy™ to be connected to a Profibus DP network. The interface offers the following functionality:-

### Installation

- ➤ Ensure all power is removed from the VMXsynergy™ unit prior to installing the option module
- Remove the blanking plate from the option module slot
- Carefully slide the option module into the slot, ensuring that the location tabs are correctly aligned. DO NOT USE EXCESSIVE FORCE
- Tighten the two screws on the option module to secure

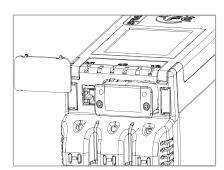


# VMX-synergy configuration

VMX-synergy™ will automatically configure when the option module is installed. Correct installation can be confirmed from the touch screen interface:

Device >> Networks >> Profibus

# Front panel

 	Item
_1	Operation mode
2	Status
	Profibus network
3	connector



### Operation mode

State	Indication		
Off	No power or not inserted		
Green	Online data exchange		
Green, flashing	Network OK, no data exchange		
Single Red flash	Parameter error		
Double Red flash	Network error		
Status			
State	Indication		
Off	No power		
Green	Initialised		
Green, flashing	Initialised, Self testing		
Red	Error		

### **Profibus DP Connector Pinout**

Pin	Function			
1	N/C			
2	N/C			
	B line Positive RxD/TxD,			
3	RS485			
4	RTS			
5	Bus Ground (GND)			
6	+5V Bus output termination power			
7	N/C			
8	A Line negative RxD/TxD, RS485			
9	N/C			

### **GSD File**

A GSD file for the interface is available from www.motortronics.com

# **PLC Configuration**

Configuration of the PLC varies between different systems. When configuring the Profibus network in the PLC, it is important to ensure that the output data sent from the PLC to the drive is in a lower slot number than the input data from the drive back to the PLC. Refer to information on the specific PLC system in use for further guidance

# VMX-synergy™ Profibus DP control

The current Profibus interface for this device is specified in the sgy1000.gsd file. This contains the configuration required to run the synchronous standard telegram 1 allowing start/stop and fault monitoring of the VMX-synergy™ unit.

The standard telegram consists of two 16 bit set-point words. The first being the drive control word.

This has the following functionality.

Output Word 1 (STW1)							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Fault	-	Unfreeze	Ramp	Enable	Coast	i	Start
Reset		Ramp	On	Operation	Stop		
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
-	-	-	-	-	Network	-	-
					Connect		

The second Probifbus Standard telegram 1 set-point word (NSOLL\_A) is not implemented in this version so will not respond to set values.

The response telegram also consists of two words, this time values generated by the VMX-synergy™ unit in response to the set-points. The first word holds status information and has the following meaning.

Input Word 1 (ZSW1)							
Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	Switch	Quick	Same	Fault	Operation	Switched	Ready
	on	Stop	as Bit 0	(Tripped)	Enabled	On	Switch
	Inhibited	Disabled					On
Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Bit 1	-	-	-	-	-	Network	-
						Connected	

As with the Outputs the second Profibus Standard telegram 1 value word (NIST\_A) is not implemented in this version so should be ignored.

### California Customers:

# **California Proposition 65 Warning**

WARNING: this product and associated accessories may contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information visit <a href="https://p65warnings.ca.gov">https://p65warnings.ca.gov</a>



Solid State AC Motor Control

# 

# PROFIBUS DP MODULE USER GUIDE

Phasetronics, Inc. dba Motortronics 1600 Sunshine Drive Clearwater, Florida 33765 USA

Tel: +1 727.573.1819 or 888.767.7792 Fax: +1 727.573.1803 or 800.548.4104

www.motortronics.com